11 & 12 W I C K

DIRECTIONS


For Installing This Wick in Model 11 & 12 Aladdin Lamp



ALADDIN INDUSTRIES INCORPORATED
705 Murfreesboro Road
Nashville, Tennessee
PRILAND, OREGON • LONDON • TORONTO
*Reg. U. S. Pat. Off.

- ELECTRIC LAMPS AND "WHIP-O-LITE" SHADES

Aladdin PARTS

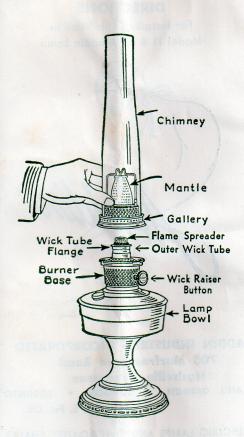

We Suggest You Read the Following Instructions Carefully (All of Them) Before Re-Wicking

Remove the gallery containing the mantle and chimney. Lift out the flame spreader and unscrew the burner. Remove the outer wick tube by turning it to the left and raising it.

Turn up the wick as far as it will go. Grasp the wick itself and turn slightly to disengage the wick raiser from the two metal lugs on the wick. Remove the wick raiser by turning it down until the wick is free from gears. The old wick is now readily lifted out of the burner.

Put the new wick through the top of the burner, working each half down through the half circular openings. Use care not to roughen up the charred end when putting the mounted wick in the burner.

Put the loose ends of the wick through the wick raiser and engage the wick raising rack with the gears so that it can be operated by the wick raiser button.

Now turn the raiser up as far as it will go; spring the ends of the raiser over the metal lugs on the wick so that the holes in the raiser encircle the lugs.

Replace the outer wick tube, being sure it is locked under all catches. After re-wicking, the wick tubes should be level to each other.

IMPORTANT: Fill the bowl with oil. Before lighting, let the lamp stand for not less than 2 hours so that the wick becomes thoroughly soaked with oil.

ALWAYS USE FRESH AND CLEAN KEROSENE

Whenever you change wicks, or after using your Aladdin for six months, empty all oil out of bowl. Such oil will be found full of sediment, and it is, therefore, unfit for use and should be discarded. If left in bowl it will eventually clog the wick and prevent it from supplying proper amount of oil to the flame.

WICK CLEANER



Every new Aladdin is furnished with a wick cleaner which is essential in keeping your wick in proper shape. If you have lost or misplaced your cleaner, we suggest you obtain another from your local dealer. Never use a knife or scissors to trim an Aladdin wick.

DIRECTIONS FOR USING

Remove the gallery containing mantle and chimney, and then lift out the flame spreader from its seat in the center tube. Lower the wick below the top of the tubes, and insert the open end of the cleaner in the center tube from which the flame spreader has just been removed. Now rotate the cleaner clockwise using only enough pressure to remove any carbon deposit on the outer wick tube flange. Continue until flange is clean and bright. Then with the cleaner still in place, remove your hand from it, and turn up the wick until it raises the cleaner away from the wick tube flange about the thickness of a thin dime. Now again rotate the wick cleaner clockwise with slight pressure until the wick is smooth and even. In raising the wick under the cleaner be sure not to raise it so high that the cleaner presses too heavily upon it, and thus rough up the surface of the wick.

ALADDIN INDUSTRIES INCORPORATED 705 Murfreesboro Road Nashville, Tennessee

PORTLAND, OREGON . LONDON . TORONTO

Form No. 197X Revised Sept. 58 Printed in U. S. A.

KEROSENE MANTLE LAMPS - LANTERNS - HEATER