

the gallery properly locked in position on the burner.

9. How to clear sooted mantle: If your mantle should accidentally become blackened from carbon or soot, it may be cleaned by turning the flame low and letting the soot burn off slowly.

10. Satisfaction comes with proper care: Your Aladdin is very reliable and will give perfect results if given the proper care. Given such care, your Aladdin will give you wonderfully white and bright light at extremely low cost. **For best results,** use only genuine Aladdin parts on your Aladdin lamp. All Aladdin parts have been scientifically designed to give the best lighting results, the most trouble-free service when "used together." If you want the best service from each Aladdin part, make sure the others are genuine Aladdin too! Only that way can you be assured of the quality performance built into your lamp.

Aladdin Supplies can be obtained from your nearest local Aladdin Dealer. If you do not know who he is, write us for that information.

Aladdin

KEROSENE

Mantle Lamp

**OPERATING
ASSEMBLING
MAINTAINING**

**Instructions
for lamps
with Model C Burner**

TRADE MARK REGISTERED

TO ASSEMBLE:

1. Remove all wrappings and cardboard from burner.
2. Screw burner into bowl or fount by turning it to the right. (Fig. 1). When using lamp with shade, attach tripod to gallery as instructed on tripod envelope.

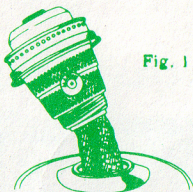


Fig. 1

NEVER USE GASOLINE OR OTHER DANGEROUS FUELS IN YOUR ALADDIN LAMP.

3. Unscrew filler cap and fill bowl or fount with good grade *kerosene* — coal-oil (read paragraph 1 under "Important Information" on reverse side).
4. Allow new wick to soak in kerosene for at least two hours.
5. Read instructions on im-

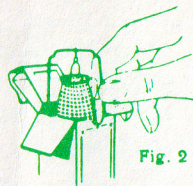


Fig. 2

TO OPERATE:

1. After wick is thoroughly soaked with kerosene, turn gallery to left and lift gallery, mantle and chimney as a unit.
2. Turn wick up about one-eighth inch above outer wick tube (Fig. 5) and light. When flame covers entire wick surface, carefully put gallery, mantle and chimney assembly into place on burner by turning to right. **CAUTION!** Don't allow gallery to *drop* into position as this could injure mantle.

3. Turn wick up slowly until part of the mantle glows white and allow it to stand for several minutes to warm up burner. When normal burning warmth is reached, turn lamp up to full light capacity. Never turn lamp up to full light capacity immediately after lighting as this will usually cause lamp to smoke in a short time. A correct lighting condition exists when you have fully lighted mantle *without* points of flame breaking through the mantle.

4. To put out light, turn lamp down to a low flame and blow it out. Don't try to turn it down far enough to go out without blowing as this will not only damage wick-raising mechanism, but also could cause flame to smolder in wick tube.

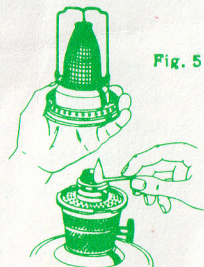


Fig. 5

proved Loxon mantle box, then remove mantle as directed (Fig. 2). Place mantle gently on gallery (the upper detachable part of burner which also holds chimney) and lock metal mantle base under both catches by turning to the right (Fig. 3).

6. Burn protective coating off by touching *flame* of match to bottom of mantle. Don't touch mantle with match stick itself as

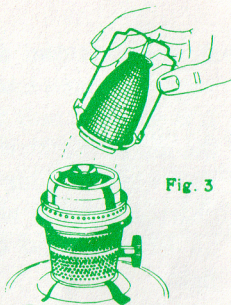


Fig. 3

5. Do not clean wick unless it has a formation of carbon crust on it. If it has to be cleaned, remove gallery assembly and turn wick down even with wick tube flange. Then remove flame spreader (thimble-like part) from inner wick tube. Insert wick cleaner in wick tube (Fig. 6), turn wick up until it gently presses against cleaner. Turn cleaner to the right slowly until wick is smooth. Never permit cleaner to ruffle or gouge wick as this will produce a ragged wick edge and high points of flame when lamp is lighted (read "Care of Wick" in Item 5 in "Important Information" on reverse side).

6. Sometimes a user will unintentionally allow his lamp to burn dry. This usually burns the wick so badly and unevenly that it is the wisest thing to insert a new wick to insure proper results from your Aladdin. Direc-



Fig. 6

this will damage mantle.

7. If burner is equipped with a *clip-style chimney adapter*, place it in gallery and lock into place by turning the adapter to right. Next, insert chimney into clip adapter. Bend clips slightly if chimney fits too tightly or loosely. It should fit snugly, but do not *overbend*.

If your lamp is equipped with a *permanent clip gallery*, insert chimney into gallery without turning. Bend clips to allow for snug fit.

If your lamp is equipped with *Lox-On chimney*, just insert chimney into gallery and lock snugly by turning gently to right.

tions for replacing the wick will be found packed with each new Nu Type Aladdin Instant Light Wick.

7. If you want a low light, never turn your lamp down so far that the flame becomes yellow. Be sure that there is always a small amount of light in the mantle.

FOR BEST RESULTS

BE SURE TO READ
"IMPORTANT INFORMATION"
ON REVERSE SIDE

Aladdin Industries, Inc.
703 Murfreesboro Road
Nashville, Tennessee 37210

IMPORTANT INFORMATION ABOUT YOUR ALADDIN LAMP

READ AND REMEMBER

1. NEVER USE GASOLINE OR OTHER DANGEROUS FUELS IN YOUR ALADDIN LAMP.

For best results, use a good grade of fresh, clean, refined kerosene. Be sure that the container in which you keep your kerosene is kept clean at all times. Every time you install a new wick (or every six months) empty the bowl of its oil, clean it, and put in fresh, clean kerosene.

2. Soak new wick at least two hours before using.

3. Handle chimney, mantle and gallery as a unit. This protects the mantle. Do not remove chimney from gallery except to clean chimney or install new mantle.

4. Allow your Aladdin lamp to warm up ten minutes after wick is lit before turning it up to full light capacity.

5. Care of the Wick: Cleaning the wick is very important. Use your wick cleaner carefully. It is designed only to remove carbon and to keep the top of the wick smooth and uniform as on a new wick. If your wick has become too badly charred and too uneven, replace it. Remember an irregular and charred wick produces poor light.

6. Care of Flame Spreader: This small thimble-like part which rests on the inner wick tube must be kept clean and free from dirt. If it becomes dented, replace it at once.

7. Good Air is necessary. Your Aladdin requires good air in order to burn with the blue flame which gives you your good abundant white light. You'll get the best results from your lamp if the room in which it is used is not stuffy.

8. Insure proper performance. Keep Aladdin parts properly assembled. The Flame Spreader must be seated all the way down — the outer wick tube securely locked in place — the mantle properly and securely locked on the gallery — the chimney properly locked to the gallery, and